



## Disassembly Manual for Springfree Trampolines



Installing the tgoma can be challenging if you don't carefully follow these instructions. To make it easier, we have demonstration videos that will guide you through each step. Visit [www.tgoma.com/support](http://www.tgoma.com/support) to get started.

The information in this document is subject to change without notice.

© Copyright tgoma NZ Ltd., 2016. All rights reserved.

731401



# WARNING

Read the warnings on this page and those contained in the disassembly instructions. Ensure you read and follow all instructions as specified in these disassembly instructions.



Treat any loaded rod with caution until you are sure it is properly installed or uninstalled. Keep face clear of loaded rods. An improperly installed rod could release and cause facial injury or blindness.



Assembly and disassembly of the trampoline in any way other than what is set out in these instructions could cause serious injury or damage the trampoline.



Never attempt to remove a black net rod from its net pocket or disengage (unlock) the rod sleeve while the black net rod is under tension.



In regions where there is an accumulation of snow and ice and/or temperatures drop below 14 degrees Fahrenheit (-10 degrees Celsius), we recommend the removal of the controller from the trampoline. The cables do not need to be removed, however, please ensure that the plugs at the end of the cables are tightly sealed in plastic (e.g. inside a plastic bag) and positioned in such a way that no moisture can enter.



Do not hold onto, or place fingers between the rods while someone is jumping on the trampoline.



The trampoline and tgoma game system are not intended for children under 6 years of age as certain parts could represent a choking or entrapment hazard.




This game system should be disposed of separately from household waste and according to local laws. When disposing of this equipment, please take it to a designated collection point. Incorrect disposal of items can be hazardous to the environment. Many items can be recycled. Follow all local regulations for any disposal. Packaging elements of this product have been labelled to assist your choice of recycling options. In particular, always dispose of the (user supplied) batteries in full accord with the battery manufacturer's instructions.



DO NOT use a craft knife to remove any of the small cable ties as this could result in accidentally cutting the mat.

## BOTTOM VIEW

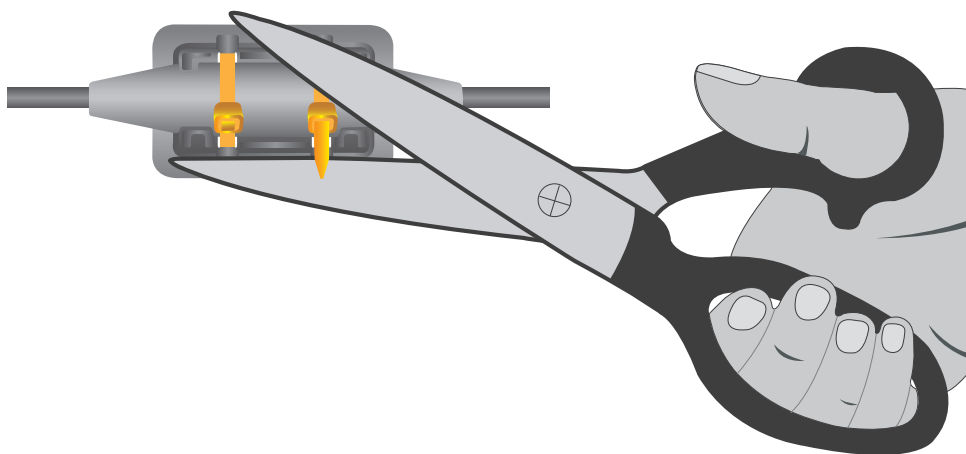

**WARNING** - Always disassemble the tgoma game system first, and then the trampoline. Disassembly of the trampoline while tgoma is still installed may cause damage to tgoma components or possible injury to people performing the disassembly.

**WARNING** - DO NOT use a craft knife to remove any of the small cable ties as this could result in accidentally cutting the mat.



**NOTE** - Have one person position themselves under the trampoline (hereafter known as the Inside Person) while the other person works around the outside of the trampoline (Outside Person).




**TIP** - Have a bag ready to store your tgoma parts so that none are lost during the disassembly process.

- **Inside Person:** Carefully cut the two cable ties on each of the four sensor mounts under the trampoline using scissors, side cutters, or pliers. The best method is to place the cutting edge around the locking head of the cable tie and cut. This method requires the locking head to be in the middle of the sensor. Take extra care not to let any sharp edges come in contact with the mat.
- **Inside Person:** Remove the sensor mounts and store them in a bag. At this point, the cables will hang freely.
- **Outside Person:** Gather the four sensor top plates on the mat surface and store them in a bag.




**TIP** - On removal of the sensor top plates, there may be small gaps in the fibers of your mat. To realign the fibres, simply rub back and forth with your thumb or fingers on each side of the gaps until they disappear.

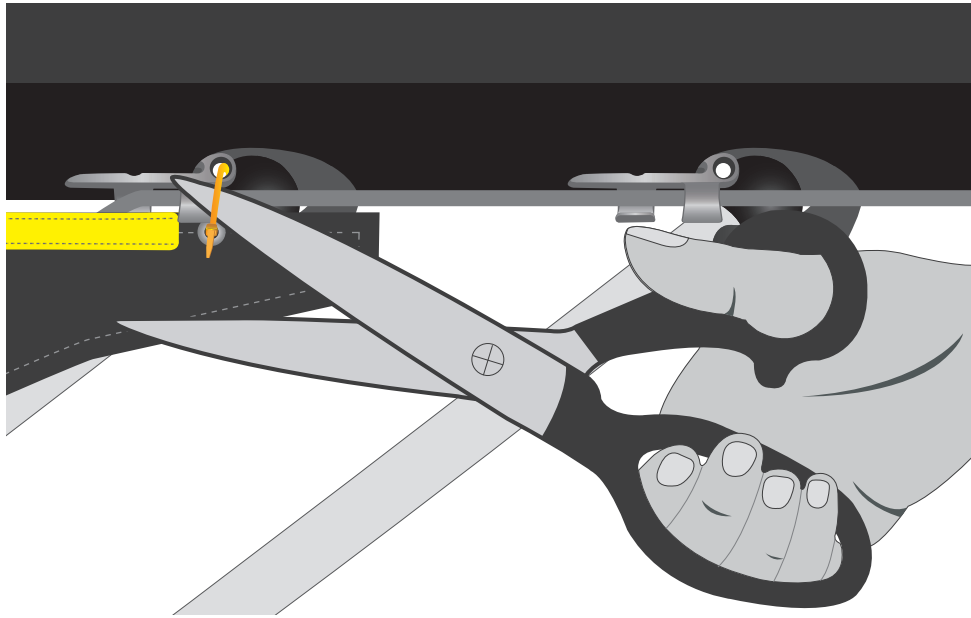**INSIDE VIEW**

**WARNING** - Treat any loaded rod with caution until you are sure it is properly installed or uninstalled. Keep your face well away from any loaded rod.

- **Insider Person:** Unclip the bottom strap of the sensor cable tube which is connected to the bottom of the controller and undo the Velcro<sup>®</sup> on the sensor cable tube attached to the mat rod.
- **Insider Person:** Next, carefully cut the cable ties from the top of the sensor cable tube where they connect with the cable clips.
- **Inside Person:** Gently unscrew the locking nuts on each cable plug and unplug both cables from the sockets on the back of the controller. Once they are free, pull the sensor cables through the sensor cable tube.
- **Inside Person:** Then, working around the trampoline, unhook both sensor cables from the cable clips.
- **Outside Person:** Coil the cables and sensor cable tube and store for future use.

## INSIDE VIEW

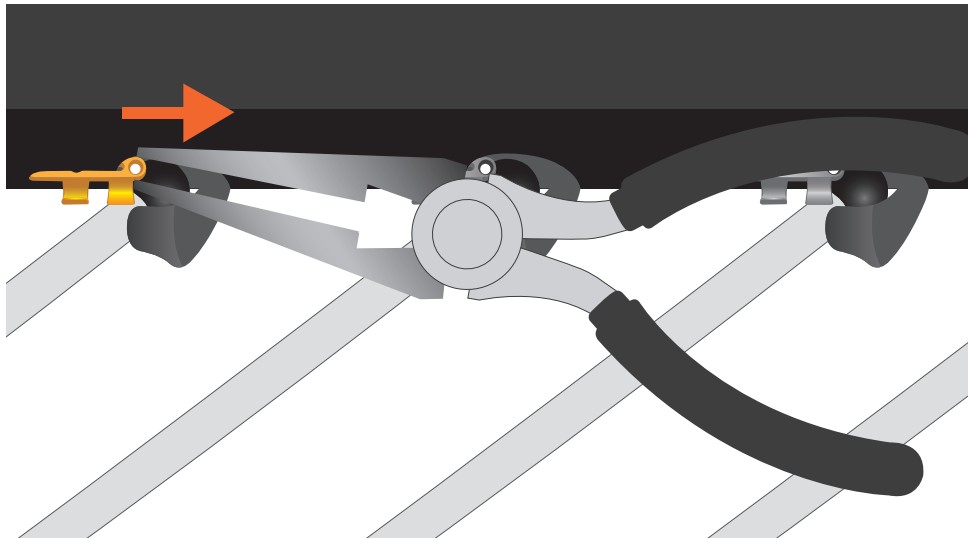

**WARNING** - Treat any loaded rod with caution until you are sure it is properly installed or uninstalled. Keep your face well away from any loaded rod.

**WARNING** - Do not remove the bolt from the leg as this could cause serious injury.



**NOTE** - If you are removing the tgoma game system temporarily but intend to keep your trampoline fully assembled, you do not need to remove the cable clips. These can remain installed on your trampoline.



**TIP** - The cable clips are designed with a sharp barb that holds the clip in place when installed. To help facilitate removing them, we suggest gently pulling them free with a pair of long nose pliers.

**TIP** - If you intend to continue with the disassembly your trampoline, follow the steps in your Disassembly Instructions or visit <http://springfr.ee/disassem> for a video demonstration.

- **Inside Person:** Working around the trampoline, carefully remove all cable clips from mat rod holder pockets and store them in a bag.
- **Inside Person:** Carefully cut the cable ties holding the controller to the trampoline frame and undo the nut holding the controller in place. DO NOT remove the bolt in the leg.
- **Insider Person:** Once the controller is removed, replace the trampoline leg nut and tighten with spanner.
- **Outside Person:** Remove the tablet holder from the trampoline net.
- **Outside Person:** Store the controller, battery pack and tablet holder, along with the other tgoma parts so that nothing is lost or damaged.